


PUTTING GREEN SYSTEM

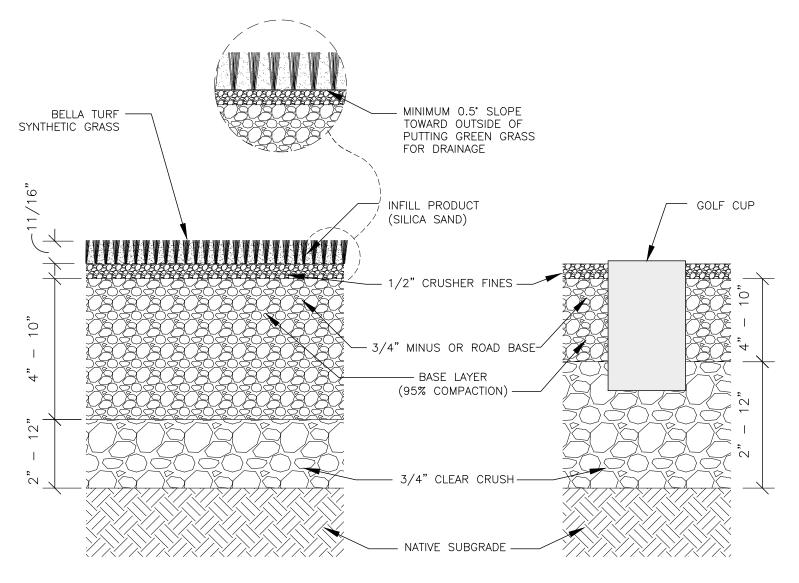

GENERAL NOTES:

- BASE LAYER TO BE 3/4" MINUS OR ROAD BASE AND COMPACTED TO MINIMUM 95% COMPACTION
- SYNTHETIC GRASS PRÓDUCT INSTALLED WITH GRAIN OF THE FIBRES ALL RUNNING IN THE SAME DIRECTION
- JOINT SEAMS (IF REQUIRED) AS PER MANUFACTURERS RECOMMENDATIONS. REMOVE THREE STITCHES FROM BOTH SIDES OF GRASS. CUT TIGHT TO STITCH. TIGHT ON THE STITCHES WITH 0" GAP BETWEEN, SIMULATING THE STITCH PATTERN
- INFILL PRODUCT APPLIED TO REQUIRED AMOUNT AS PER MANUFACTURERS RECOMMENDATION
- INSTALLATION OF PRODUCT TO BE AS PER THE MANUFACTURERS RECOMMENDATIONS
- DRAWING NOT TO BE SCALED

Bella Turf

Tel. (604)385-4727 #107 - 19347 24th Ave. Surrey, BC V3Z 3S9

Tel. (905)276-7333 #5-6 - 600 Orwell St. Mississauga, ON L5A 3R9 1-888-970-8771

www.bellaturf.ca